GOLE F1 Windows10 刷机说明

首先感谢各位对 GOLE F1 的支持！

下面介绍一下 GOLE1 Windows10 的刷机步骤

第一步：将 U 盘插入电脑进行格式化；

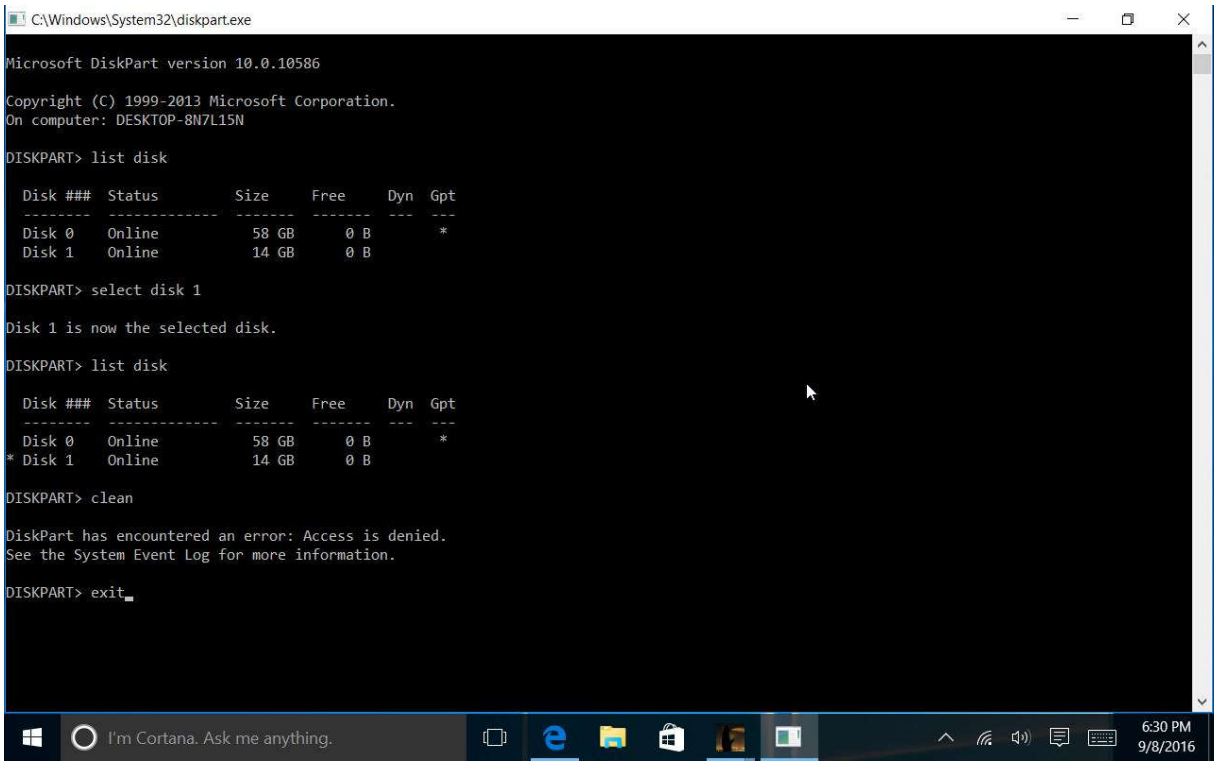

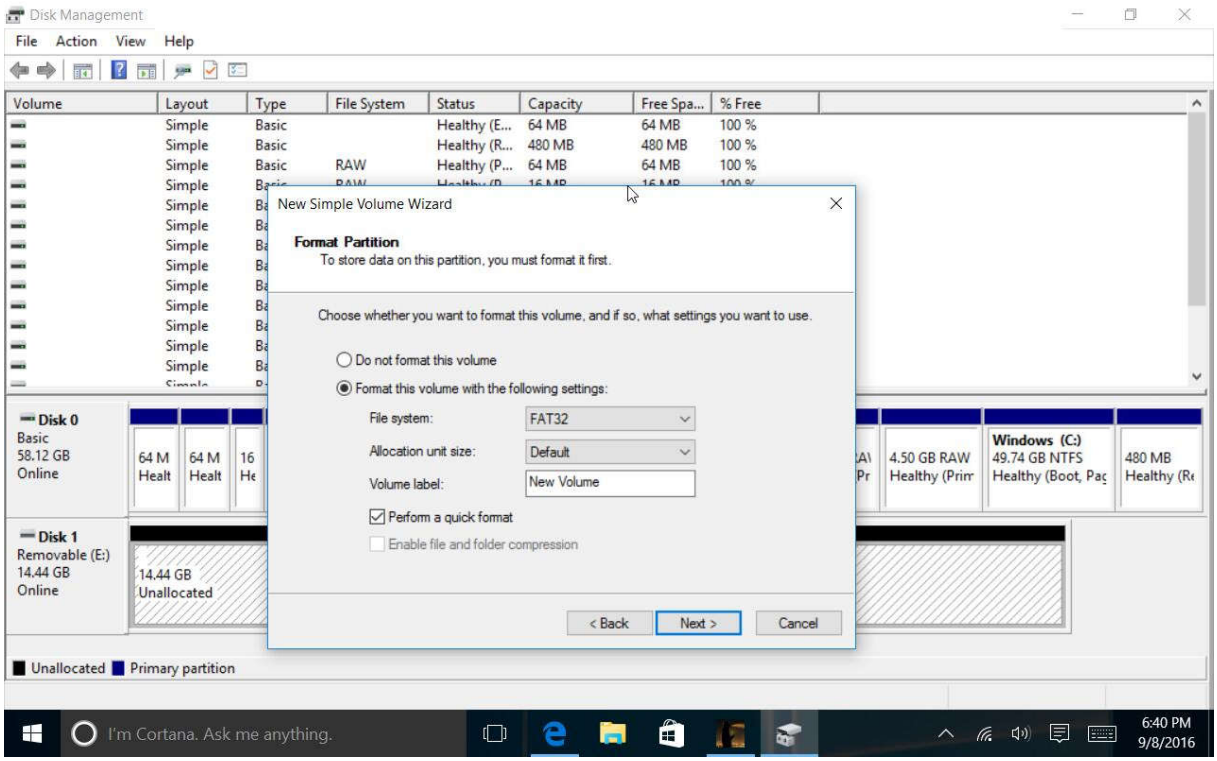
Disk Management
File Action View Help
Volume Layout Type File System Status Capacity Free Spa... % Free
Simple Basic Healthy (E... 64 MB 64 MB 100 %
Simple Basic Healthy (R... 480 MB 480 MB 100 %
Simple Basic RAW Healthy (P... 64 MB 64 MB 100 %
New Simple Volume Wizard
Format Partition
To store data on this partition, you must format it first.
Choose whether you want to format this volume, and if so, what settings you want to use.
Do not format this volume
Format this volume with the following settings:
File system: FAT32
Allocation unit size: Default
Volume label: New Volume
Perform a quick format
Enable file and folder compression
< Back Next > Cancel
Disk 0
Basic
58.12 GB
Online
Windows (C:)
49.74 GB NTFS
Healthy (Boot, Pag
480 MB
Healthy (Re
Disk 1
Removable (E:)
14.44 GB
Online
14.44 GB
Unallocated
Unallocated Primary partition
I'm Cortana. Ask me anything.
6:40 PM
9/8/2016

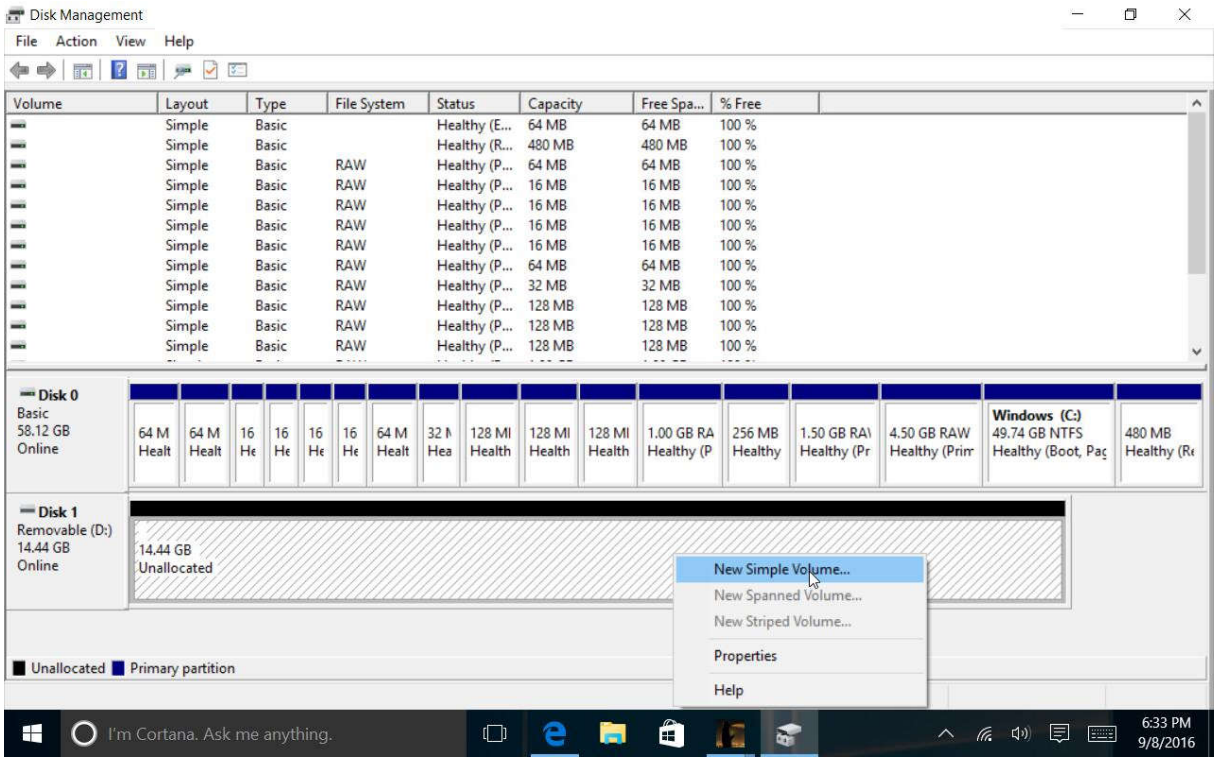
Disk Management
File Action View Help
Volume Layout Type File System Status Capacity Free Spa... % Free
Disk 0
Basic
58.12 GB
Online
Windows (C:)
49.74 GB NTFS
Healthy (Boot, Pag
480 MB
Healthy (Re
Disk 1
Removable (D:)
14.44 GB
Online
14.44 GB
Unallocated
New Simple Volume...
New Spanned Volume...
New Striped Volume...
Properties
Help
Unallocated Primary partition
I'm Cortana. Ask me anything.
6:33 PM
9/8/2016

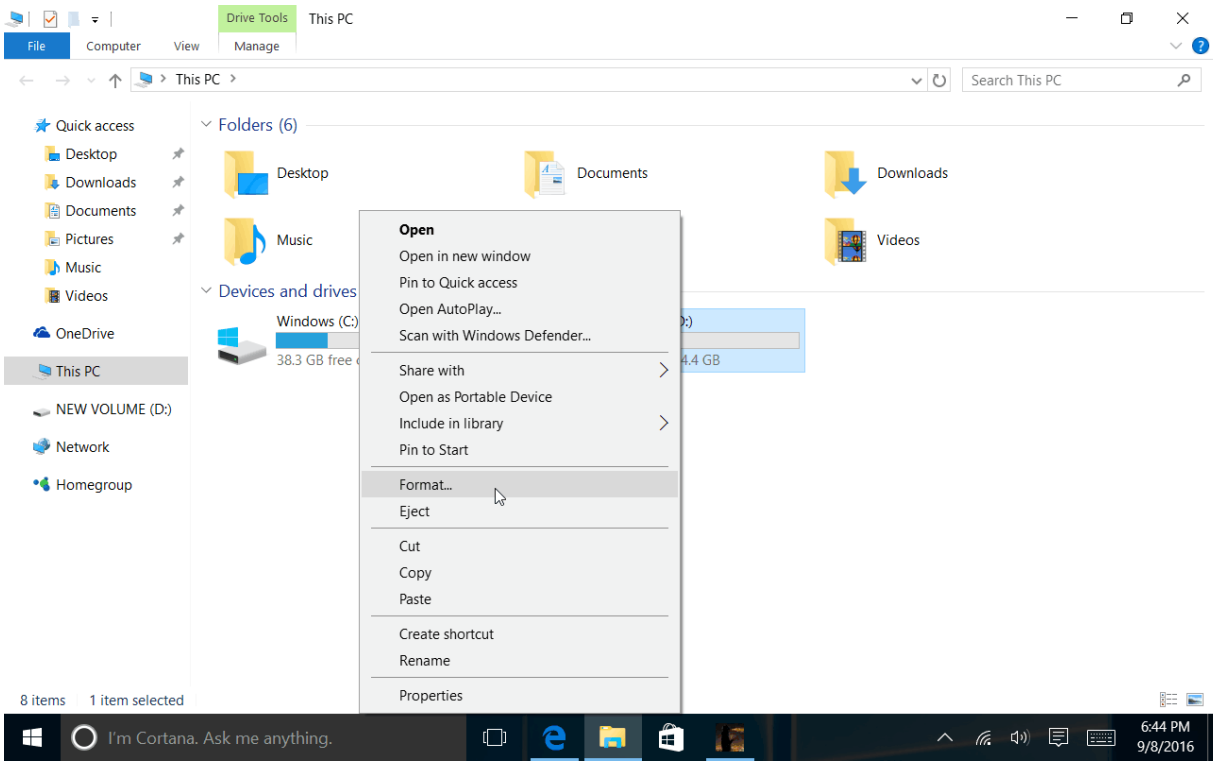

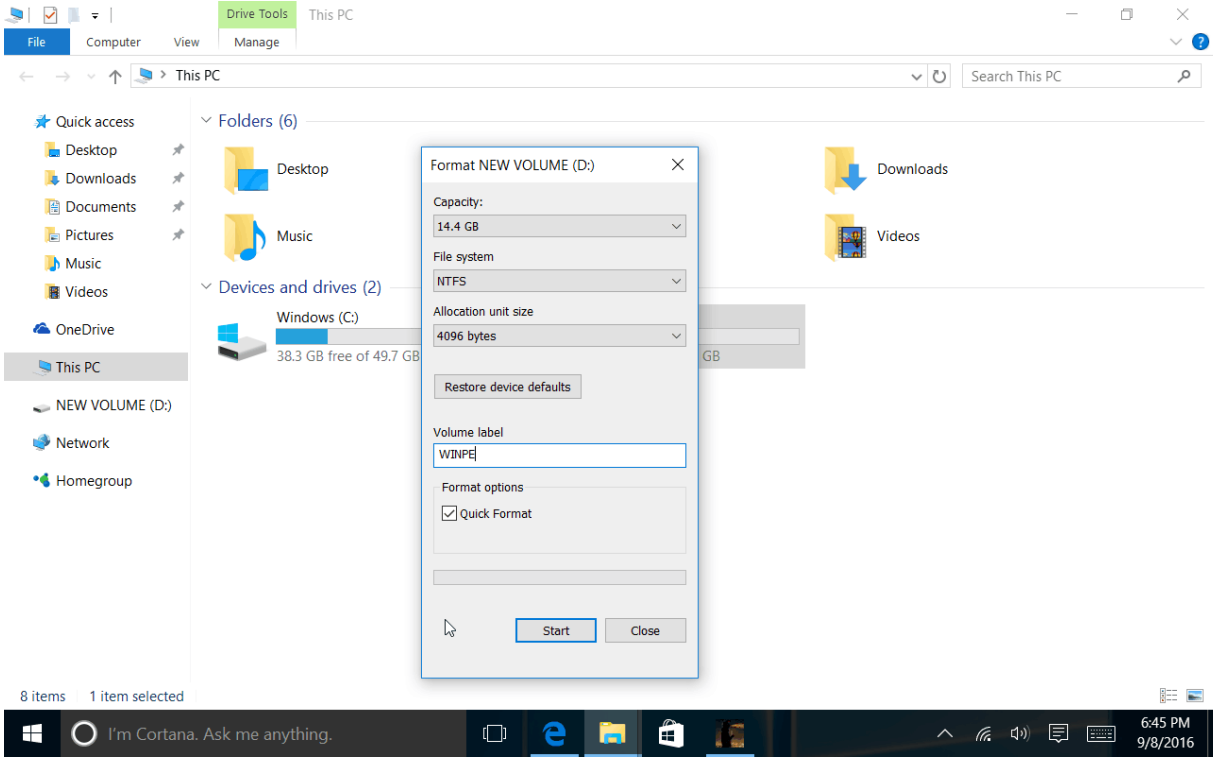

.

第二步：下载我们发送给您的压缩包，解压到电脑，再拷贝到 U 盘，这样系统 U 盘制作就完成了！

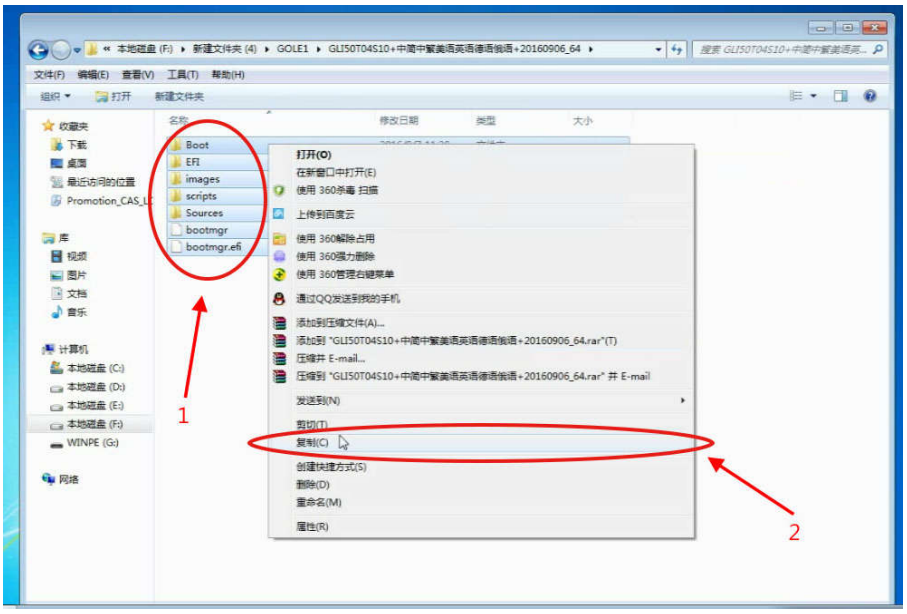

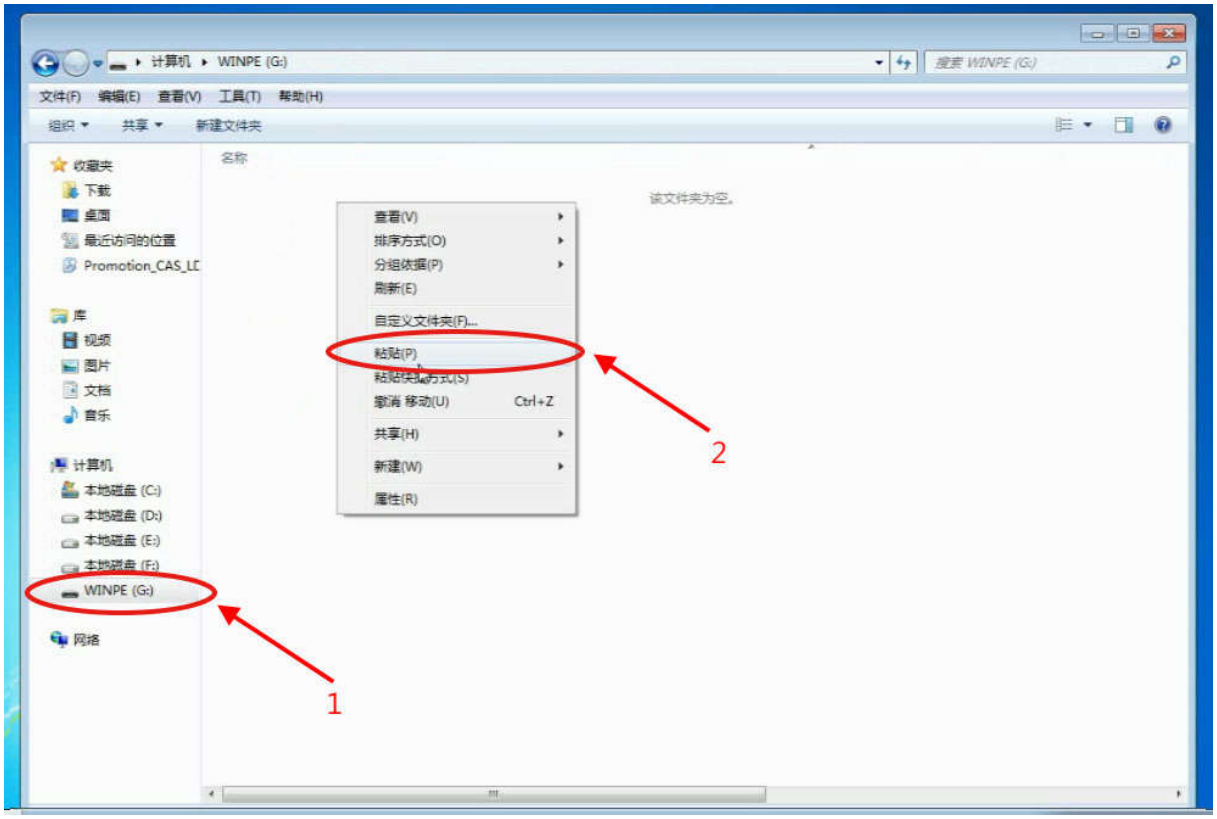

第三步：将制作好的系统 U 盘插入到 GOLE1，按 F7 进入到 Please select boot device:界面，找到你的 U 盘名称，选择从 U 盘启动。

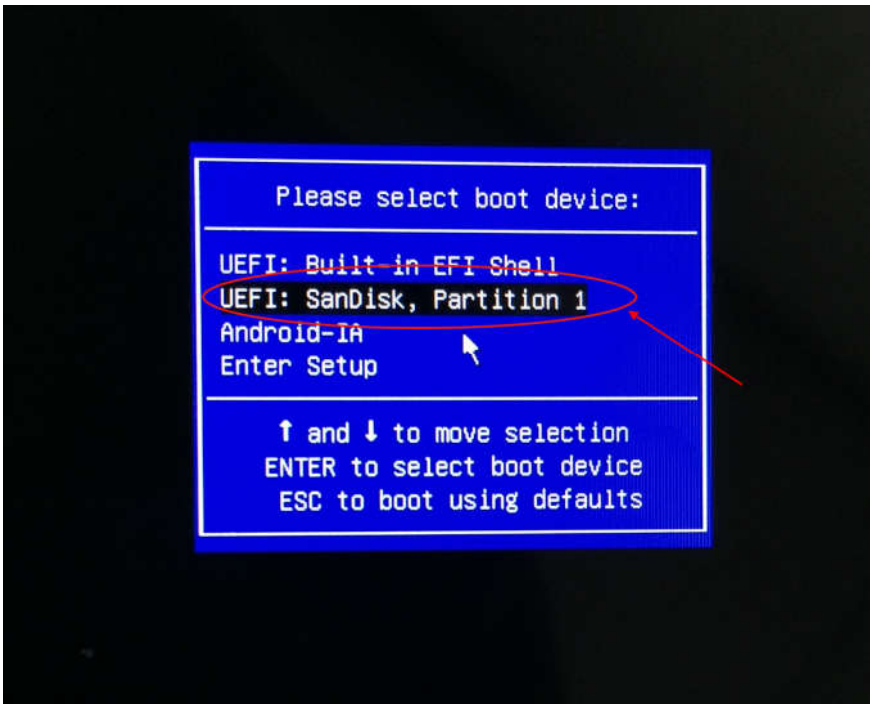

第四步：进入该界面，选择 WinPE_64bit，按 Enter 确认进入安装。

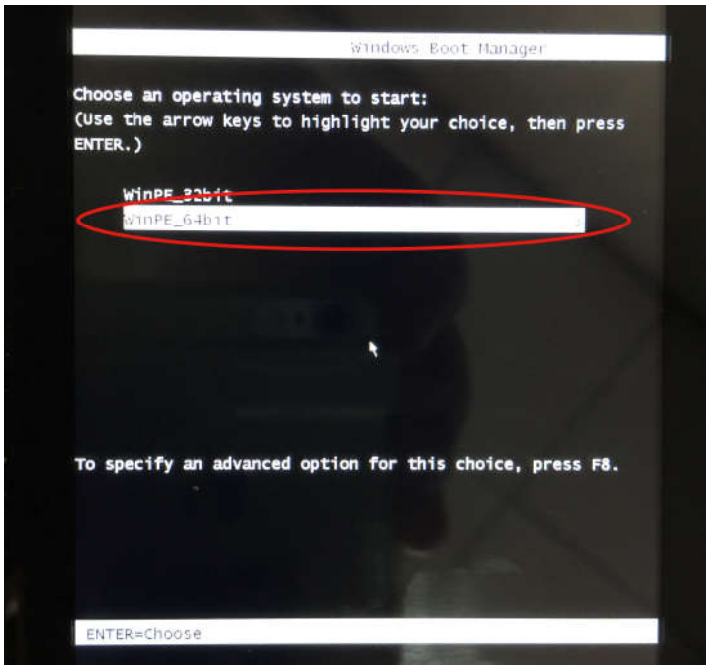

第五步：自动安装完成，点击 OK 会进行自动重启，重启完成后自动进入语言设置，设置完成后将完成 windows10 刷机；

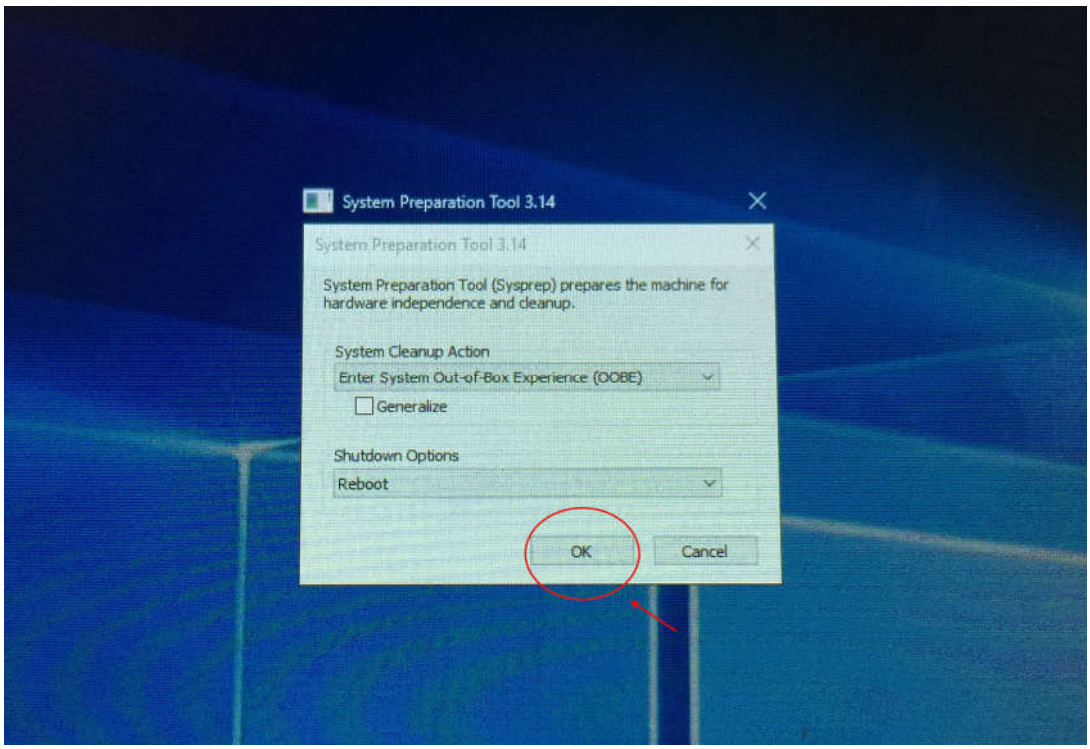

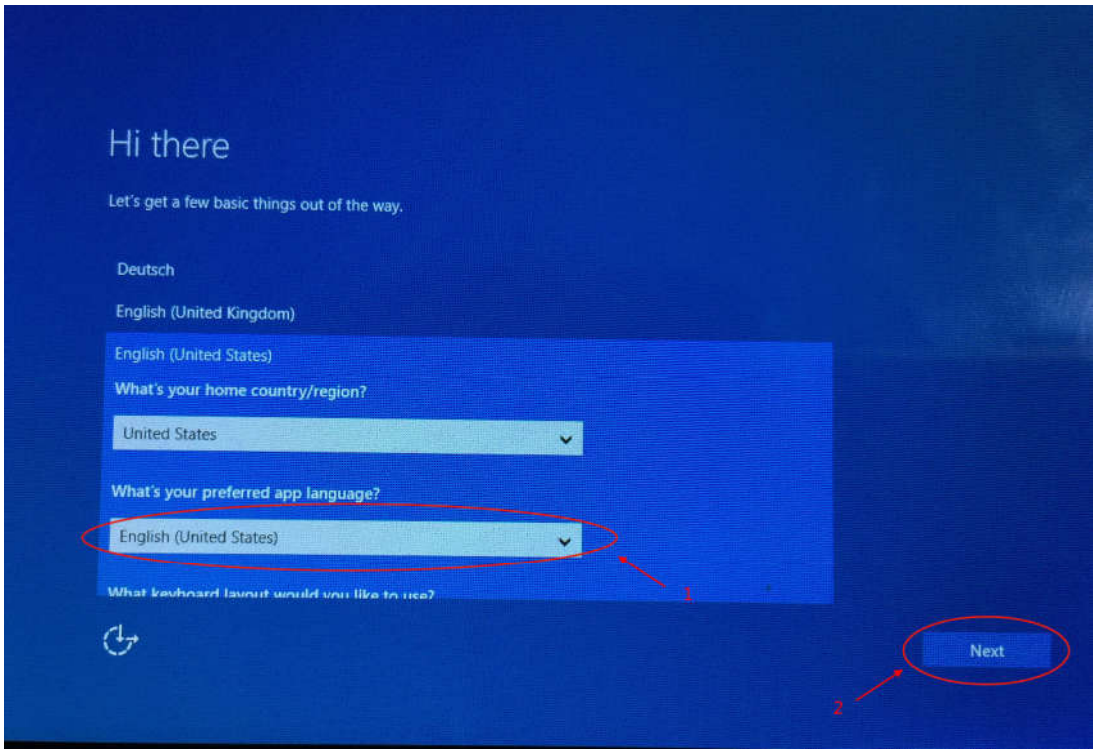

如果您有任何的疑问，欢迎您跟我们联系！